

# Intracom VCOM Client Configuration

Log into the Intracom VCOM Admin VIA web browser: <http://{VCOM Matrix IP address}>

Intracom VCOM Web Portal

Below are links to the System Administration and the WebRTC Control Panel.

### System Administration

Type	Talk/Listen Name	Listen Only Name	Login Name	Login Password	Description	PL	Lastname	Selector Assignable Template
VCP	Windows Desktop	Coltine	Coltine	1234	Coltine Radio call	Yes		
VCP	Google Android	Dana H	dhanaly	SHARDUS	Dana Harding Essential Tele	Yes		
VCP	Google Android	Francine Analyst	franalyst		Francine Analyst	Yes	Group 0	
VCP	Google Android	IBC Analyst	IBC	IBC Analyst	IBC Analyst	Yes	Group 0	
VCP	Windows Desktop	Janet Analyst	JAnalyst		Janet Analyst	Yes		
VCP	Windows Desktop	Kath M	kathm	KATHM	Kath M Essential Telecom	Yes		
VCP	Apple iOS	Ken	ken	Ken Smiley	Ken Smiley	Yes		
VCP	Apple iOS	Marianne Ambrosio	Marianne_A	MPCIS	Marianne Ambrosio	Yes		
VCP	Windows Desktop	Vocality	vocality	VOCALITY	Vocality test account	Yes		
SP	Desktop	SP-Track 1	sptrack1	sptrack	SP-Track 1	Yes		
VEEO	RTSP Video Stream	Ji Jazawa	JiJazawa	ARKSIEDUS		Yes		
VEEO	RTSP Video Stream	Ighitea	Ighitea		Pointer to a local file server.	Yes		
VEEO	RTSP Video Stream	Procedural	Procedural			Yes		

- Monitor the status of the Virtual Matrix
- Add and configure clients
- Assign selectors
- View diagnostic logs

### Control Panel

- Push-to-talk with other clients
- Watch multiple video streams simultaneously
- Rearrange windows in your control panel
- Geolocate other clients

Intracom VCOM System Administration

**User: admin**  
**Password: None (default)**

Login

Login Name:

Login Password:

Auto-Login:  ON  OFF

If you can not log into the Virtual matrix, verify the virtual Matrix IP address is correct.

Configuration

Virtual Matrix IP Address:

Port:

HTTPS:  ON  OFF

Certificate:


IP address of the virtual matrix

# Intracom VCOM Client Configuration

The screenshot shows the Intracom VCOM System Administration interface. At the top, the Intracom logo is on the left, and 'VCOM - System Administration' is on the right. Below the logo, there are four main navigation tabs: 'System Status', 'System Maintenance', 'System Configuration', and 'System Information'. The 'System Configuration' tab is selected and expanded, showing a dropdown menu with four options: 'System Settings', 'Client Configuration', 'Group Configuration', and 'User Interface Settings'. A red arrow points from the 'Client Configuration' option to the 'System Information' section below. The 'System Information' section contains three rows of data: 'Licensee:' with a green bar, 'Licensed Connections:' with a green bar and the number '100', and 'License Expiration:' with a green bar and the date '10 / 22 / 2020'.

**Enter into the Client Configuration**

# Intracom VCOM Client Configuration

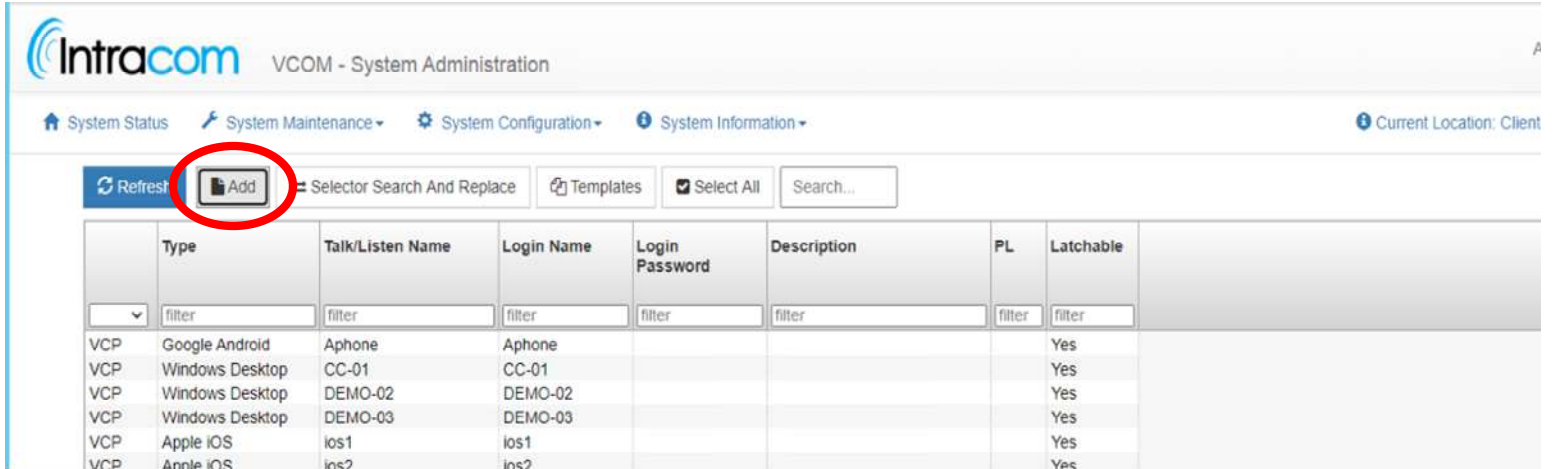

Intracom VCOM - System Administration


System Status System Maintenance System Configuration System Information Current Location: Client

Refresh Add Selector Search And Replace Templates Select All Search...

Type	Talk/Listen Name	Login Name	Login Password	Description	PL	Latchable
VCP	Google Android	Aphone	Aphone			Yes
VCP	Windows Desktop	CC-01	CC-01			Yes
VCP	Windows Desktop	DEMO-02	DEMO-02			Yes
VCP	Windows Desktop	DEMO-03	DEMO-03			Yes
VCP	Apple iOS	ios1	ios1			Yes
VCP	Apple iOS	ios2	ios2			Yes

Edit Client

## Settings for a Windows Control Panel

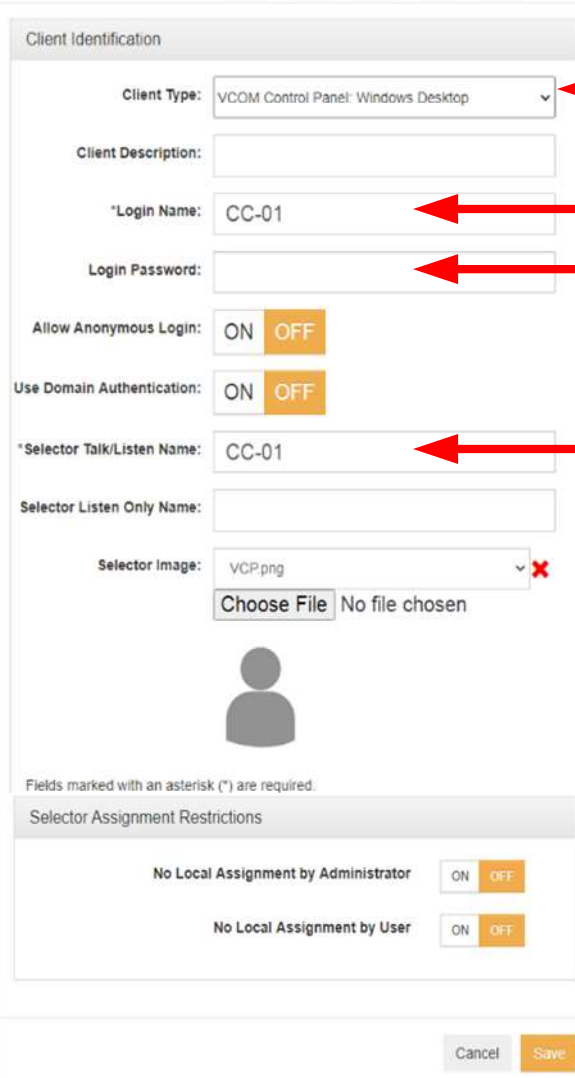

Client Identification

Client Type: VCOM Control Panel: Windows Desktop

Client Description:

\*Login Name: CC-01

Login Password:

Allow Anonymous Login: ON OFF

Use Domain Authentication: ON OFF

\*Selector Talk/Listen Name: CC-01

Selector Listen Only Name:

Selector Image: VCP.png Choose File No file chosen

Fields marked with an asterisk (\*) are required.

Selector Assignment Restrictions

No Local Assignment by Administrator ON OFF

No Local Assignment by User ON OFF

Cancel Save

Enter the user name for this control panel location.

Enter the password for this control panel location.  
\*Note PW can be (blank)

Enter the Name you want to appear on all Control Panels

Save

# Intracom VCOM Client Configuration

Intracom VCOM - System Administration

System Status | System Maintenance | System Configuration | System Information | Current Location: Client

Refresh Add Selector Search And Replace Templates Select All Search...

	Type	Talk/Listen Name	Login Name	Login Password	Description	PL	Latchable
VCP	Google Android	Aphone	Aphone				Yes
VCP	Windows Desktop	CC-01	CC-01				Yes
VCP	Windows Desktop	DEMO-02	DEMO-02				Yes
VCP	Windows Desktop	DEMO-03	DEMO-03				Yes
VCP	Apple iOS	ios1	ios1				Yes
VCP	Apple iOS	ios2	ios2				Yes

Edit Client

Client Identification

Client Type: VCOM Device Interface: Four-Wire Interface

Client Description:

\*Login Name: AID00105-01

Login Password:

Allow Anonymous Login: ON OFF

Use Domain Authentication: ON OFF

\*Selector Talk/Listen Name: BTR 01

Selector Listen Only Name:

Selector Image: VDI.png

Choose File No file chosen

Selector Assignment Restrictions

No Local Assignment by Administrator: ON OFF

No Local Assignment by User: ON OFF

Cancel Save

## Settings for a BTR Device

Enter the user name for this control panel location.

Enter the password for this control panel location.  
\*Note PW can be (blank)

Enter the Name you want to appear on all Control Panels

Save

Follow this step multiple times for each AID audio port until all device ports are entered.

# Intracom VCOM Client Configuration

Intracom VCOM - System Administration

System Status System Maintenance System Configuration System Information Current Location: Client

Refresh Add Selector Search And Replace Templates Select All Search...

Type	Talk/Listen Name	Login Name	Login Password	Description	PL	Latchable
VCP	Google Android	Aphone	Aphone			Yes
VCP	Windows Desktop	CC-01	CC-01			Yes
VCP	Windows Desktop	DEMO-02	DEMO-02			Yes
VCP	Windows Desktop	DEMO-03	DEMO-03			Yes
VCP	Apple iOS	ios1	ios1			Yes
VCP	Apple iOS	ios2	ios2			Yes

## Edit Client

## Settings for a SIP Telephone Device

Client Identification

Client Type: SIP Device: PSTN Telephone Interface (FXO)

Client Description:

\*Login Name: 101

Login Password:

Allow Anonymous Login: ON OFF

Use Domain Authentication: ON OFF

\*Selector Talk/Listen Name: Tel01

Selector Listen Only Name:

Selector Image: SIP.png Choose File No file chosen

SIP

Fields marked with an asterisk (\*) are required.

Selector Assignment Restrictions

No Local Assignment by Administrator ON OFF

No Local Assignment by User ON OFF

Cancel Save

Enter the user name for this control panel location.

Enter the password for this control panel location.  
\*Note PW can be (blank)

Enter the Name you want to appear on all Control Panels

Save

# Intracom VCOM Client Configuration

Intracom VCOM - System Administration

Administrator

System Status System Maintenance System Configuration System Information Current Location Logout

Refresh Add Edit Selector Assignments Audio Settings Options Disable Delete Duplicate Templates Search...

Type	Talk/Listen Name	Login Name	Login Password	Description	PL	Latchable
------	------------------	------------	----------------	-------------	----	-----------

**Logout of the System Administration Program**